



Picture 1.




Picture 2.

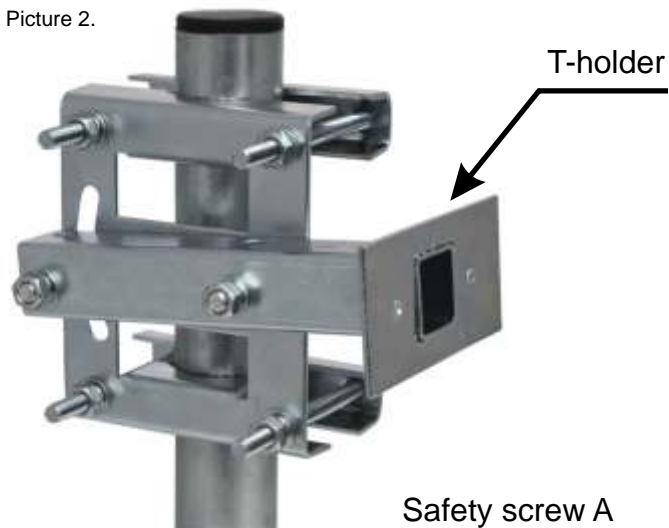

Picture 3.

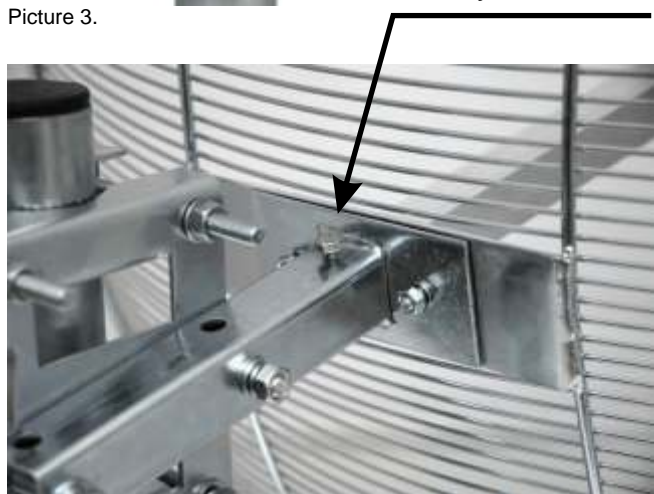

Picture 4.

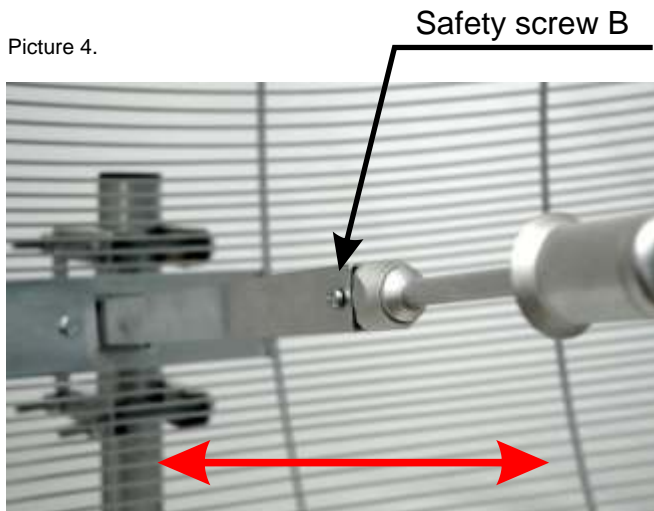

Step 1.

Drag antenna's cable used for connecting with a device over the aluminium profile. Screw it on the feeder according to pict. 1.

Step 2.

Insert the feeder to aluminium profile and pull it into the end. Consequently, screw safety screw.

Step 3.

Assemble the bracket of Grid 32-5G v2 according to picture 2. For horizontal polarization place T-holder to the position according to picture 2. For vertical polarization slew T-holder in 90°.

Step 4.

Mount the parabolic reflector to T-holder by using screws according to picture 3.

Step 5.

Insert the feeder along with cable into the T-holder and pull it into the end. Screw safety screw A. Orientation of the feeder is defined by safety screw. Safety screw has to be in parallel with grid of parabolic reflector (see picture 4).

Note:

If you use cable which is thicker than 5mm, it is necessary to install it before the installation of the bracket in step 3.